

## **Storm Panels (Clear)**


### **Measuring Instructions:**

#### **For Panels:**

- Measure the opening width and height
- If measuring a door be sure to measure height from the floor to top of opening (for mounting sill to floor).
- If door has steps, measure the height from the top of the step to the top of the opening (for mounting sill to top of front of steps).
- Download Panel Chart to determine finished width of opening & number of panels needed.
- Add 6" to height for window & 3" for Door.
- Standard H-Header top track & studded angle bottom track are included.

Example:

**Finish Size**  
**36x63**

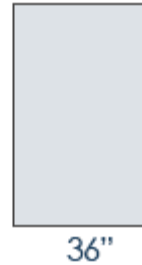

63"

**Shutter Finished**  
**Size 39"W x 69"H**