

## Colonial Shutter (Hurricane & Decorative)


### Measuring Instructions:

#### Flat Wall:

1. Measure opening width "inside opening"
2. Measure opening height " inside opening"
3. Add 1-1/2" to width to account for hinges.
4. Place finished size measurements for width and height on order

Example:

Finish Size  
36x54

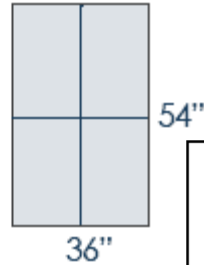

**Shutter Finished  
Size 37-1/2"W x  
54"H**

#### With Sill Projection & Bans:

5. \*Measure Sill Projection to determine build out from wall. Place that Build Out measurement in notes section of order .
6. If stucco or wood bans are above & below opening. Subtract 1" from shutter finished height.

**\*Include that measurement for build out.**